

# MULTIMEDIA BOARD USER NOTES

## EPSON EB-695Wi

**Power On** - Use remote & press “Blue” button once. **Allow minute to start.**

**Power Off** - Use remote & press “Blue” button and again to confirm.


**Home Screen** - Use remote & press “Home” key for Home Screen. This screen displays connections. Select connection to project. Ensure device is connected. See table below for connection ports.

**Projection Screen** - If Home Screen is displayed, use remote & press “Home” key to display the Projection Screen or select the X icon on the Home Screen. See Image.

**Whiteboard Screen** - If Home Screen is displayed, use remote & press “Home” key to display the Projection Screen, plus:-



1. Hold an interactive pen close to screen or touch the projection screen.

2. Tap or touch the  or  arrow tabs to display the Toolbar.

3. Tap or touch the  icon at top of the annotation toolbar to switch to whiteboard or



### Projector Toolbar

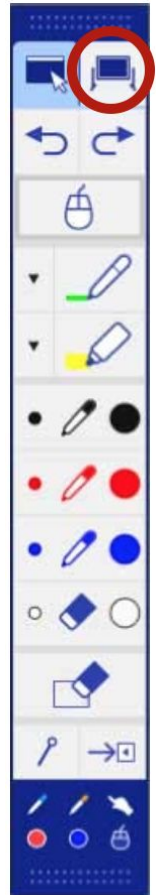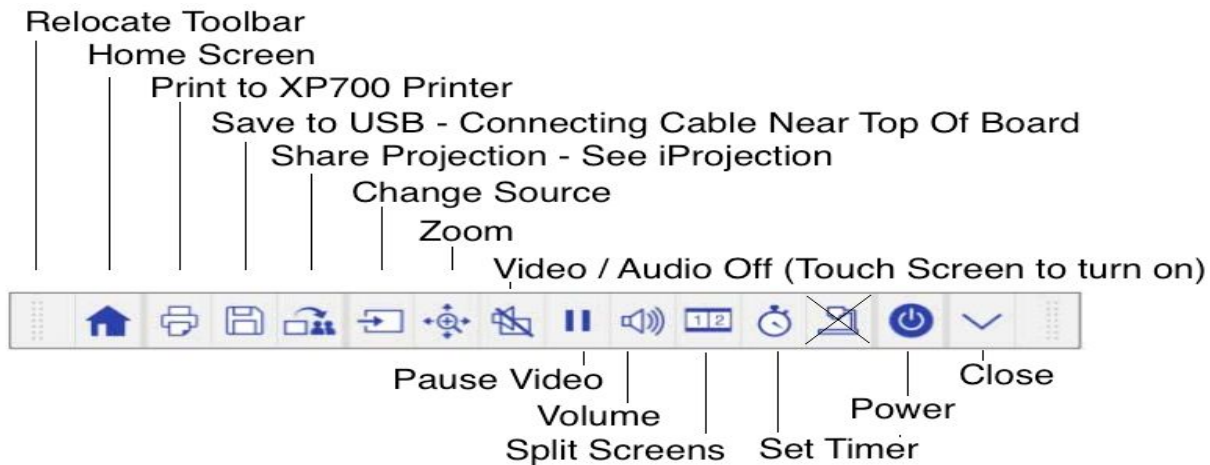

### Connections

PORT	DEVICE & CONNECTION DETAILS
HDMI 1	HDMI 1 Wall Socket for PC.
HDMI 2	Apple Devices. Use AirPlay button on iPhone, iPad, Apple Computer etc. Use Apple Remote.
HDMI 3	TV Set Top Box. Use With Set Top Remote.
Comp 1	PC (VGA) Wall Socket. Paired with Audio Socket.
Video	Video Wall Socket. Paired with Audio Socket.
Audio	Audio Wall Socket. (Stereo) Paired with PC and Video .
LAN	Wireless connection via WiFi access point AHBC.
Comp 2	Currently this port is disabled.

### Apps

Use Epson iProjection App for classroom type interaction with board. See Apple or Google stores for device apps.

#### Apple User (Computers, iPhones, iPads or iPod)

Use AirPlay icon to display or play content to Apple TV device on HDMI 2. No Cables required